Montageanleitung

ConStands Mover XB2

Verwendung: Vorderrad

DE

Allgemeine Hinweise

Vielen Dank für den Kauf eines **ConStands** Montageständers.

Bitte lesen Sie sich die folgenden Montagehinweise sorgfältig durch. Die Motea GmbH übernimmt keine Haftung für Sach- und/oder Personenschäden, die durch eine unsachgemäße beziehungsweise mangelhafte Montage oder Nutzung entstehen. Überprüfen Sie vor jedem Gebrauch die korrekte Funktionsweise. Ziehen Sie bei Bedarf die Schrauben nach.

Technische Änderungen, Druckfehler und Irrtümer vorbehalten.

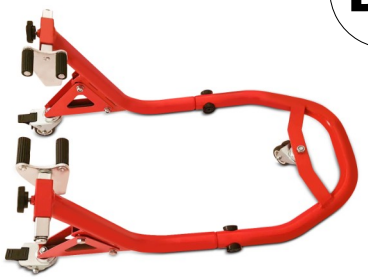

Benötigte Werkzeuge und Vorrichtungen:
- 6 mm Innensechskantschlüssel
- SW 13, 14 Maul/Ringschlüssel

Pos.	Lieferumfang	Stk.
1	Seitenteil	2
2	Bügel mit Rolle (ungebremst)	1
3	Senkkopfschraube M10x9 (10.9)	4
4	Kunststoffhülse	4
5	Rollenträger mit Rolle (gebremst)	2
6	Sechskantschraube M8x40	4
7	Unterlegscheibe	8
8	Selbstsichernde Mutter	4
9	Front-Aufnahmen	2
10	Knaufschraube	2

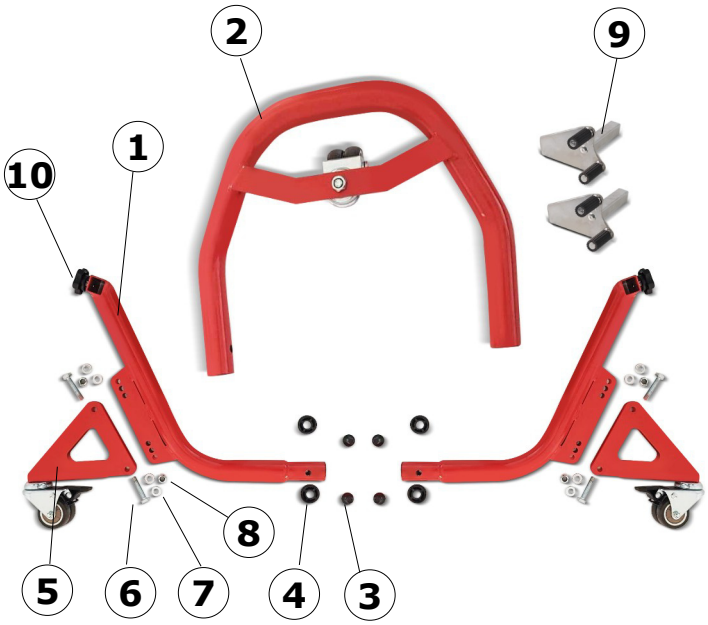

Schritt 1:
Verbinden Sie die Seiteneile (**1**) mit dem Bügel (**2**) und befestigen Sie diese mit den Schrauben (**3**), unter Verwendung der Kunststoffhülsen (**4**).

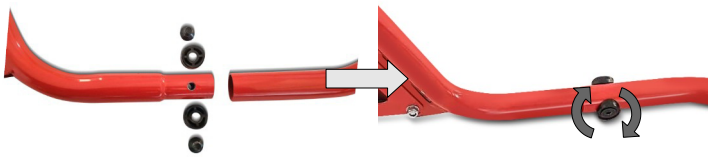

Schritt 2:
Installieren Sie die Rollenträger (**5**) unter Verwendung der Schrauben (**6**) und sichern diese mit den Scheiben (**7**) und Muttern (**8**).

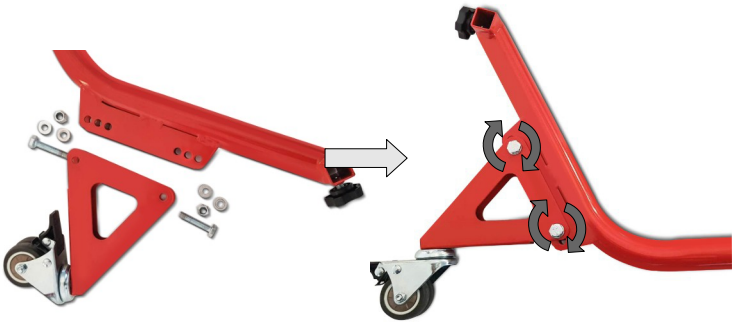

Schritt 3:
Installieren Sie die Aufnahmen (**9**) und sichern Sie diese mit den Knaufschrauben (**10**).

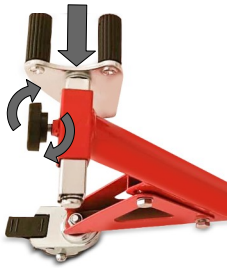

Mounting Instruction

ConStands Mover XB2

Use: Front

EN

General Information

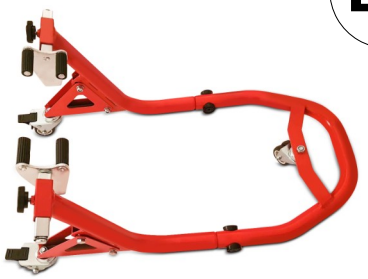

Thank you for purchasing a **ConStands** paddock stand.

Please read the following installation instructions carefully. Motea GmbH accepts no liability for damage to property and/or personal injury resulting from improper or faulty installation or use.
Please check the correct function before each use. Retighten the screws if necessary.

Subject to technical changes, printing errors and mistakes.

Required tools:
- 6 mm allen key
- SW 13, 14 spanner

Pos.	Scope of delivery	Qty.
1	Side part	2
2	U-Bolt with roller (unbraked)	1
3	Countersunk screw M10x9 (10.9)	4
4	Plastic sleeve	4
5	Caster carrier with roller (braked)	2
6	Hexagon screw M8x40	4
7	Washer	8
8	Self locking nut	4
9	Front-Mounting	2
10	Knob screw	2

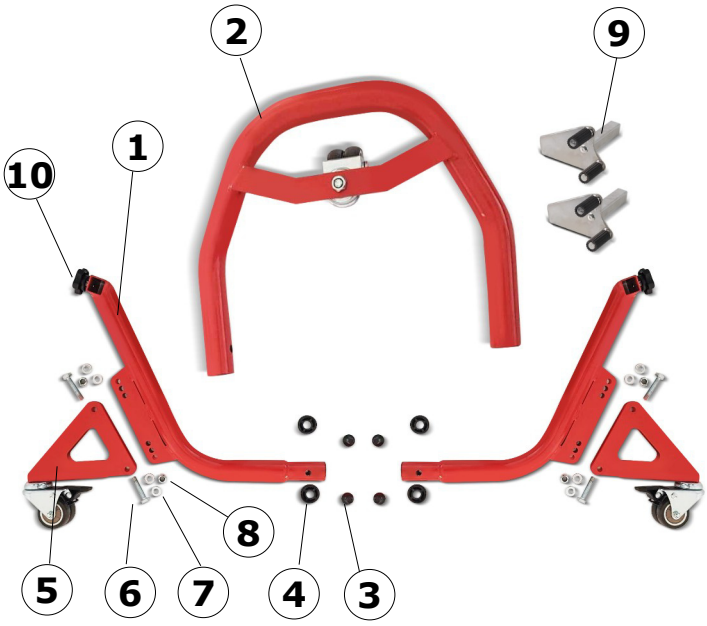

Step 1:
Connect the side parts (**1**) to the u-bolt (**2**) and secure them with the screws (**3**) using the plastic sleeves (**4**).

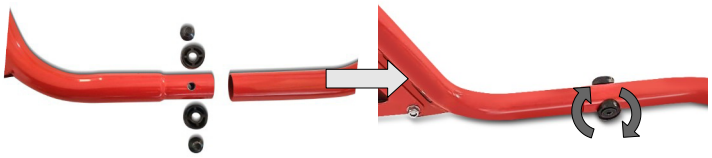

Step 2:
Install the caster carrier (**5**) with the screws (**6**) and secure it with the washers (**7**) and nuts (**8**).

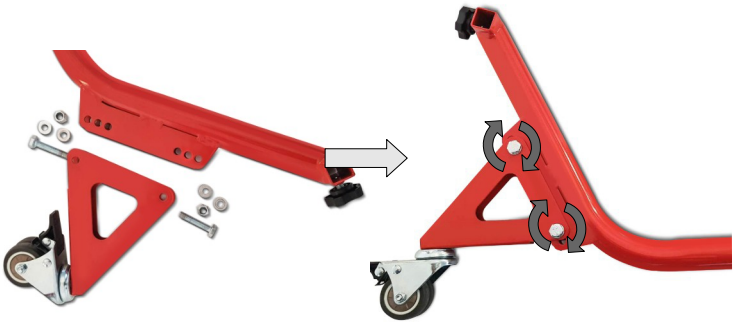
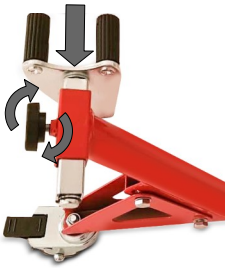
Step 3:
Install the mountings (**9**) and secure it with the knob screws (**10**).